

TEMSEN CONFIGURATION GUIDE

1. Overview

This guide provides step-by-step instructions for configuring the Temsens temperature sensor with the Actatek device. The integration enables body temperature monitoring after user access .

2. Hardware Connections (*Please turn off ACTAtek device first.)

The Temsens device connects to the Actatek board through three main connection points:

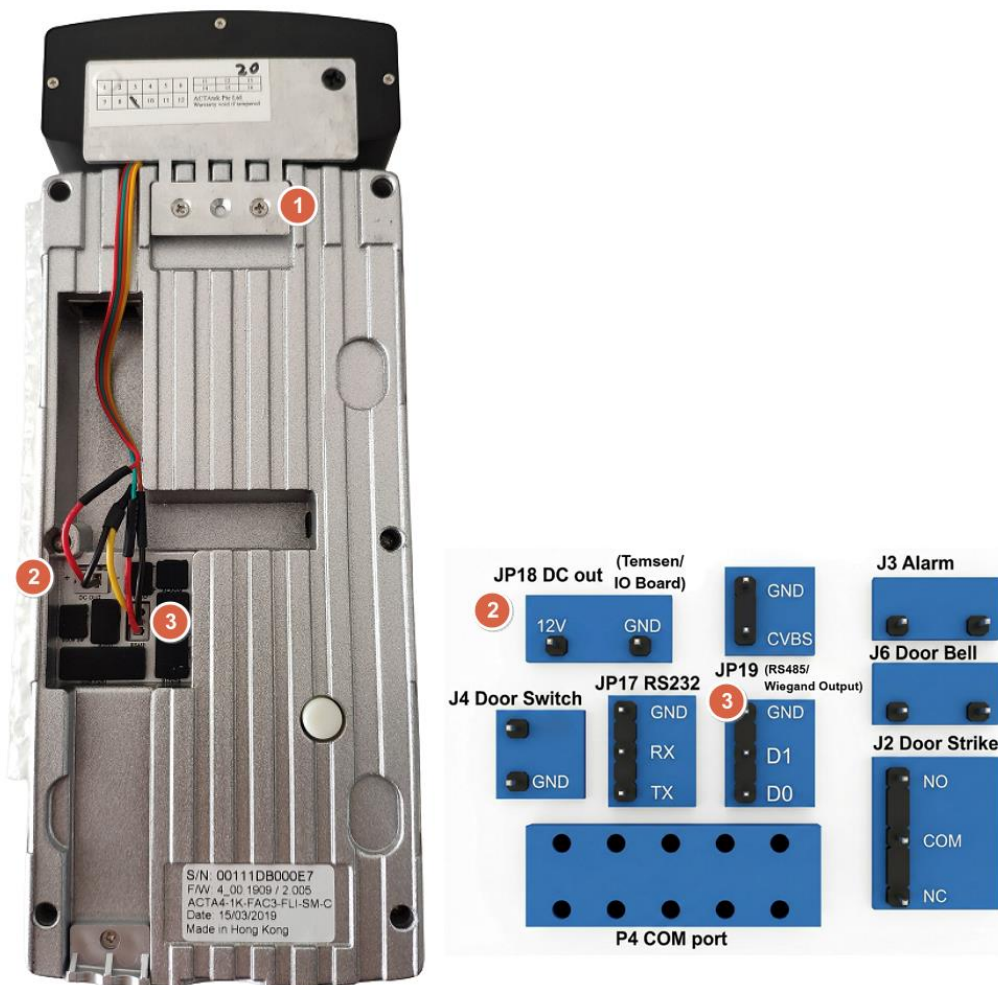


Figure 1: Temsens Wiring Diagram

3. Terminal Setup Page Configuration

After completing the hardware connections, configure the terminal settings through the ACTatek device's [Terminal Setup] to enable the temperature sensor functionality.

Figure 2: Terminal Setup Configuration Screen

4. View Event Log page

ACTatek The worldwide leader in Web based technologies.

- Terminal
 - Log Off
 - Terminal Status
 - Add Record
- User Administration
 - Attendance Report
 - Daily Report
 - View Event Log
 - Add Event Log
 - View User List
 - Add New User
 - Departments
 - User Messages
 - Admin Setting
 - Payroll Info
- Access Control
 - Access Groups
 - Triggers
 - Holidays Setting

Event Log

Search Options

Name: ID:

User:

Period: or From: To:

Time: Today or Department: Event:

Others:

Fill in the form to filter the report, or leave it blank for a full report Search

Event 1-7 of 7 << < > >>

	User ID	Name	Department	Date Time	Event	Terminal	Captured Image	Remark
1	88888	--	General	2026/01/29 17:25:01	IN	Entrance_Gate_IN	View Image	#FACE(BODY:34.84)#
2	88888	--	General	2026/01/29 17:24:45	IN	Entrance_Gate_IN	View Image	#FACE(BODY:35.33)#

Figure 3: View Event Log Screen